


# Getting Started

## Setting up VBreathe Tasman

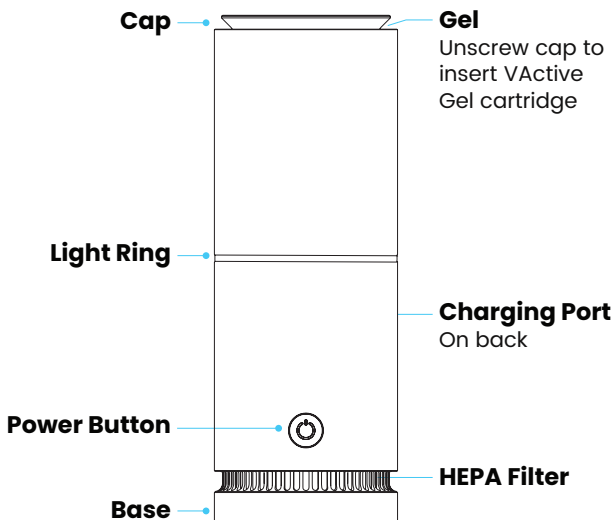

**1.** Unscrew the cap of VBreathe Tasman. Remove the lid and seal from the VActive Gel cartridge. Place the Gel cartridge into Tasman open end facing up and screw the cap back onto the device. (See Replace VActive Gel instructions)



**2.** Download the VBreathe App from the App Store or Google Play Store.



**3.** Plug in the power adaptor, then plug the USB C cable into the back of your VBreathe Tasman to power.



**4.** Double press the power button on the front of your VBreathe Tasman to activate Bluetooth pairing.



**5.** When prompted by the VBreathe App, enter the 8-digit pin on the back of these instructions. Notice: This feature is not available yet.







## Device Status



<b>On</b>	Solid White	
<b>Standby</b>	Slow Pulsing White	
<b>Auto Mode</b>	Fast Pulsing White	
<b>Battery Low</b>	Solid Red	
<b>Recharging</b>	Pulsing Red	
<b>Battery Full</b>	Solid Green	

## Light Ring

The light ring indicates current air quality in the room, Bluetooth status and shows when to replace the VActive Gel or HEPA Filter.

<b>Air Quality Good</b>	Solid Green	
<b>Air Quality Ok</b>	Solid Orange	
<b>Air Quality Poor</b>	Solid Red	
<b>Change Gel</b>	Pulsing Yellow	
<b>Change Filter</b>	Pulsing White	
<b>Bluetooth Pairing</b>	Pulsing Blue	



### Night Mode

Double-tap the top of the device to activate Night Mode, which deactivates the light ring. Double tap again to re-activate the light ring.

## Battery

On average, the battery will last up to 10 hours on medium fan speed. While the device is plugged in to a power source, the battery will automatically recharge. The USB port can also be used to charge your smart devices.

## VActive Gel

The VActive Gel should be replaced when instructed by the app or if the gel level goes below the minimum level indicated on the side of its container.

## HEPA Filter

The HEPA Filter should be changed when instructed by the app or if airflow is restricted. At a minimum, the filter should be replaced every 6 months.

## Manual Control

Control manually using On/Off button

<b>On / Low Fan Mode</b>	1st press
<b>Medium Fan Mode</b>	2nd press
<b>High Fan Mode</b>	3rd press
<b>Standby</b>	4th press



### Bluetooth pairing – Double press

Quick double press will activate Bluetooth pairing. Light Ring will flash blue.

### Turn Off – Press and hold for 3 seconds

When the device switches off completely, it will no longer be connected to the App.

### Factory reset – Press and hold for 10 seconds

Device restores factory settings. VBreathe Tasman will be inactive for 10 seconds during Factory Reset.

## Replace VActive Gel

Important: Never turn your device upside down while it has a VActive Gel cartridge installed.



**1.** Ensure the device is upright, turned off and unplugged.



**2.** Unscrew the top cap of the VBreathe Tasman as shown in the diagram and remove the used VActive Gel cartridge.



**3.** Remove the lid and seal of the new VActive Gel cartridge. Place the new VActive Gel cartridge inside VBreathe Tasman with the open end facing up. A small amount of liquid may be present on the surface of the Gel.



**4.** Screw the top cap back on VBreathe Tasman. Wash hands with soap and water after replacing the VActive Gel cartridge.

## Replace HEPA Filter

Important: Never turn your device upside down while it has a VActive Gel cartridge installed.



**1.** Ensure the device is upright, turned off and unplugged.



**2.** Unscrew the base of the VBreathe Tasman as shown in the diagram. The used filter will come out as you remove the base.



**3.** Remove the new filter from the packaging.



**4.** Place new filter into the base. Screw the base into the unit.

# Warranty

A two-year guarantee on manufacture and material defects is granted on your new appliance valid from the documented purchase date. The guarantee includes materials, salary, and transport. When contacting service please state the appliance model and serial number.

## The guarantee does not cover:

- Defects and damages which are not caused by manufacture and material defects.
- If original spare parts have not been used.
- If the instructions in the manual have not been carried out.
- If the installation has not been carried out according to this manual.
- If unauthorized personnel have carried out installation or repair work.
- Wear parts such as filter and VActive Gel.

## Transport damages

A transport damage observed when the dealer delivers the appliance at the customer is solely a matter between the customer and the dealer. If the customer has carried out the transport alone the manufacture / supplier cannot be held responsible for transport damages. All transport damages must be reported no later than 24 hours after delivery otherwise all claims will be rejected.

## Unnecessary service visits

If a service technician is called out to a defect and the customer could have corrected the defect without help e.g., by following the instructions within this manual or by changing a fuse the customer will be charged all service costs – even under guarantee.

## Commercial purchase

Commercial purchases are any purchase of appliances not used in a domestic household but instead are used for commercial purposes e.g., in a restaurant, café etc. or used to rent out or used for any other purpose including several users. In case of commercial purchase, no guarantee is granted on this appliance since this is only meant for domestic household use.

## SERVICE

For service and spare parts in England and Ireland please call below-mentioned number and you will be directed accordingly or send us an email.

Witt UK & Ireland Ltd.

(44) 148 351 6633 / info@witt.dk

## Safety & Handling

VBreathe Tasman contains essential oils, sensitive filters and electronics. Only use as indicated. Do not let children handle the device. It is not to be used as a toy.

For indoor use only. Do not use outdoors or expose to water or rain. Do not immerse in water.

Only charge the VBreathe Tasman using the charger provided.

Do not block the air intake or exhaust.

VBreathe Tasman HEPA filters should be handled with care, avoid touching the filter media when changing the filter.

Switch the device off before changing the filter. Take care not to touch the internal fan.

Use in extremely dusty or polluted environments will clog filters quicker than indicated.

Handle and use VActive Gel according to the instructions on the VActive Gel container.

VActive Gel contains essential oils. Keep away from children and pets, keep away from eyes, ears and nose. Do not ingest.

Should you experience any sensitive or allergic reactions to the vapour emitted from VBreathe Tasman then discontinue use immediately.

Use of the VBreathe Tasman device in high temperature or humidity may use the gel quicker than indicated.

## Battery & Disposal Information

This device contains a Lithium Polymer (LiPo) battery and should be replaced by VBreathe or an authorised service provider.

Do not attempt to disassemble the product or remove or replace the battery.

Please dispose of your device responsibly and recycle where possible.

VBreathe Tasman should not be disposed of in household waste.

Please return your device to VBreathe or a recycling collection point for safe disposal.

## Regulatory

This device has been tested in accordance with FCC, CE and RCM requirements.

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules.

Operations subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.